


Glastürband Glas-Glas 180°

ARTIKELNUMMER

06184

Geeignet für ESG	8 mm
Max. Glasbreite	1000 mm
Max. Glashöhe	2250 mm
Max. Glasgewicht	40 kg

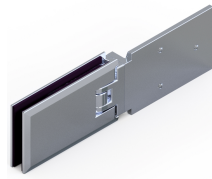

* Bei Verwendung eines dritten Bandes im oberen Drittel sind größere Höhen möglich. Rücksprache erforderlich.

ANWENDUNG:

- Für Ganzglasduschen konzipiert, viele andere Anwendungen möglich
- Nach innen und außen öffnend, Pendeltürsystem Öffnung bis 90°
- Glas-Wand Befestigung

MATERIAL:

- Gehäuse Messing, galvanisch veredelt
- Achsen, etc. Edelstahl
- Einlagen: speziell für Rutschfestigkeit und Absicherung Glas/Metall

BESONDERHEITEN:

- „Made in Germany“ in eigener Manufaktur
- Objektgeeignet, auf 100.000 Zyklen getestet
- Stufenlos einstellbare Nulllage
- Weitere passende Glas-Wand, Glas-Glas Bänder und Winkel erhältlich
- Verschiedene Oberflächen, auch Sonderoberflächen möglich
- Durch werkseitiges Einsetzen von Adaptern (Art. 06050-06061) kann der Abstand von der Wand verändert werden: Achtung, Glasbearbeitung ändert sich

EINSCHRÄNKUNGEN:

- Bei Pendeltürbändern müssen konstruktionsbedingt die im Nassraum vorgeschriebenen Dichtprofile im Beschlagbereich unterbrochen werden.

den. Ein – bezogen auf die DIN EN 14428 – erhöhter Wasseraustritt im Beschlagbereich muss toleriert und dem Kunden mitgeteilt werden

- Gewichts freigabe bis 40 kg/Glastürflügel
- Türgröße frei gegeben bis 1000 mm Breite bzw. 2250 mm Höhe

GLASANWENDUNG:

- Vorgerichtet für 8 mm Einscheibensicherheitsglas (ESG), bei anderen Glasstärken ist eine Rücksprache erforderlich
- Die Beachtung der DIN EN 12150 ist vorgeschrieben, bei Duschkabinen erweitert um die DIN 14428
- Zur Vermeidung von Spontanbrüchen ist ESG-H mit Heat Soak Test empfohlen


GARANTIE:

- Voraussetzung ist die Montage durch eine(n) Fachmann/frau
- Pflege gemäß Pflegeanleitung
- 5 Jahre Garantie

ZUBEHÖR:

- Dichtprofile: bei Glasduschen nach DIN EN 14428 vorgeschrieben
- Türgriffe
- Ausgleichsadapter, Handtuchhalter & Stabstangen

TECHNISCHE DETAILZEICHNUNGEN, GLASBEARBEITUNG:

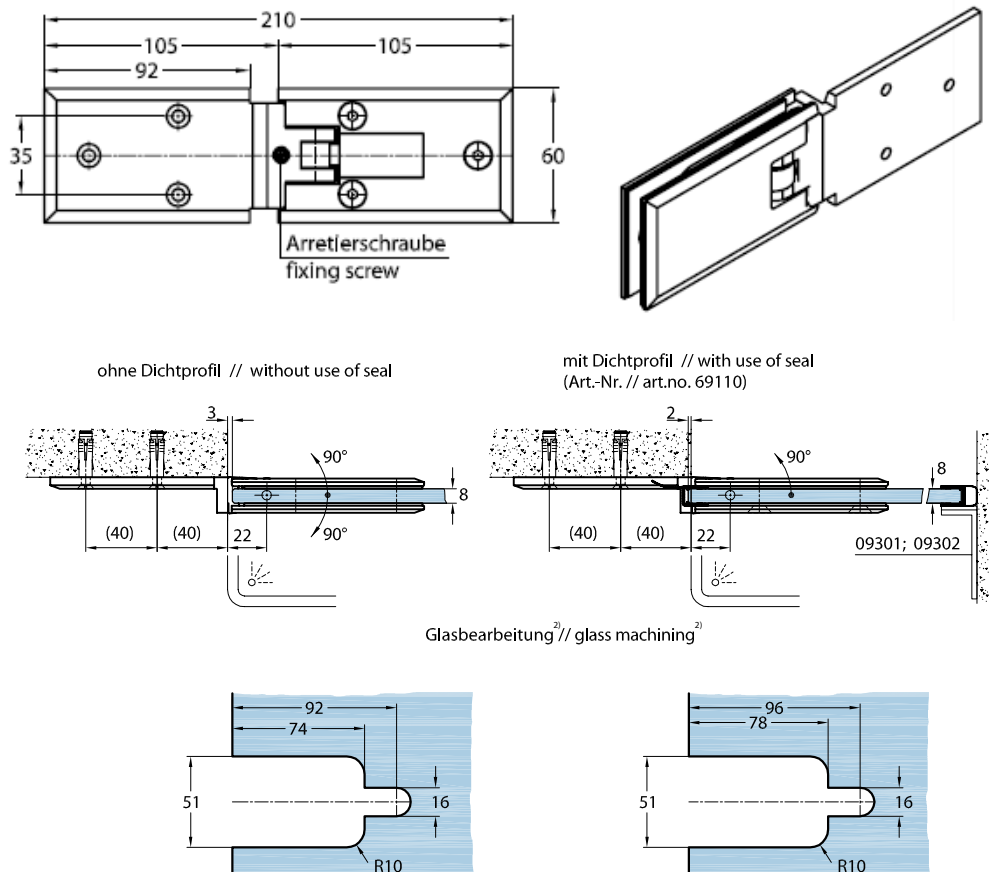


MONTAGEHINWEIS

ARTIKELNUMMER

06184

BESCHREIBUNG

Glastürbeschlag, Glas-Glas 180°

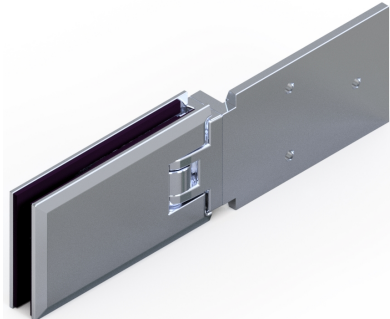

VORRAUSSETZUNGEN

- Die Montage darf nur von einem(r) Fachmann/frau durchgeführt werden.
Wir weisen diesbezüglich ausdrücklich auf unsere AGBs hin, in Sonderheit auf den § 12.
- Das verwendete Glas muss Einscheibensicherheitsglas ESG 8 mm sein, gefertigt nach DIN EN 12150.
- Bei der Montage von Ganzglas-Duschtüren/-kabinen muss die DIN EN 14428 berücksichtigt werden.
- Benötigtes Werkzeug für die Montage Beschlag/Glas: 1 Inbusschlüssel SW4.
- Benötigtes Werkzeug für die Montage Beschlag/Wand: Bohrmaschine, Wasserwaage, Maßband, passender Schraubenzieher.
- Benötigtes Befestigungsmaterial für die Montage Beschlag/Wand: Situationsbedingt geeignete Schrauben für die Wandmontage bzw. Montage an den tragenden Baukörper, sowie nach Bedarf entsprechende Dübel oder Ankerbefestigungen. Die statisch notwendige Art der Befestigungsmaterialien muss individuell bauseits geprüft werden. Die Senkungen für die Schrauben sind für Flachkopfschrauben 5 x yy mm Schraubenköpfe gefertigt, Kopfdurchmesser 9 mm. Z.B. unsere Artikelnummer 06790, 5 x 60 mm.

MONTAGE DER MILANO GLASTÜRBESCHLÄGE

- Gläser im Bereich der Beschlag-Verschraubungen reinigen. Beschlag-Gewindestutzen in die Bohrungen einführen.
Die mitgelieferten Kunststoffschlauchabschnitte unbedingt als Schutz zwischen Glas und Beschlag (Schraube), einsetzen.
- Beschlag mit der Klemmplatte anschrauben, ausrichten und mit den Befestigungsschrauben [2] (Inbus SW 4) mit 8 Nm fest verschrauben.
- Glas fachgerecht abstützen, gegen Kantenstöße absichern und ausrichten.
- Bohrung/Dübel für die obere und untere Wandbefestigung setzen.
- Glas mit den Beschlägen an der Wand befestigen, sodass die Achsen des übereinanderstehenden Beschlag-Paares genau im Lot über einanderstehen.
- Bei nicht lotgerechten Wänden ggf. Distanzplatten nutzen – bitte Rücksprache.
- Einstellung der Schließposition: die Beschläge sind in der Nulllage stufenlos einstellbar. Die Fixierung dieser Rasterung erfolgt mittels einer Arretierschraube [1] (Inbus SW 4). Die Arretierschraube [1] lösen, dann den Türflügel in die gewünschte Nullstellung bewegen und anschließend zuerst am oberen, danach am unteren Beschlag, die Arretierschraube [1] mit 8 Nm fest anziehen und noch einmal mit 9 Nm nachziehen.
- Ca. 15 Minuten nach erfolgter Montage alle Befestigungsschrauben [2] auf festen Sitz hin prüfen und nochmals mit 9 Nm nachziehen.

PRODUKTPORTFOLIO, BERATUNG, SCHULUNG


Wir bieten gerne Beratung für alternative Anwendungen und Systeme, andere Glasstärken und Glasarten wie z.B. VSG, höhere Gewichtsbelastungen, Sonderbefestigungen, Objektlösungen, Schulungen, Verkaufsberatung etc. an.

Glass door fitting glass-glass 180°

ARTICLE NO.

06184

Suitable for tempered safety glass	8 mm
Max. glass width	1000 mm
Max. glass height	2250 mm
Max. glass weight	40 kg

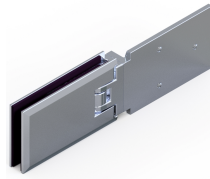

* Higher glass doors possible with use of 3rd hinge in the upper third of the panel. Please consult with us.

DESIGNED FOR:

- Frameless glass shower doors, many other applications possible
- Opens inwards and outwards, double action, opening up to 90°
- Glass-wall mounting

MATERIAL:

- Housing made of brass, plated finish
- Pins etc. stainless steel
- Inserts: special material for slip resistance – protection of glass/metal contact

SPECIAL FEATURES:

- Made in Germany in our own manufacture
- Well suited for projects – tested on 100.000 cycles
- Infinitely adjustable index
- Matching glass-wall and glass-glass hinges and connectors available
- Different finishes available, custom finishes possible
- Distance adapters (Art. 06050-06061) can be inserted with the hinge assembly in our manufactory to change the distance from the wall attachment. Caution: the glass specs will change

RESTRICTIONS

- In the case of double action hinges used in a shower room, the required sealing profiles must be interrupted with the hinge due to the design. A slightly increased leakage of water through the hinge above the guidelines

of the DIN EN 14428 code must be tolerated and communicated to the customer.

- Weight approval up to 40 kg/glass door leaf
- Door size approved up to a width of 1000 mm or a height of 2250 mm

GLASS APPLICATION:

- Prepared for 8 mm tempered safety glass, consultation is required for other glass thicknesses
- Compliance with DIN EN 12150 is mandatory, with shower stalls extended by DIN 14428
- To avoid spontaneous glass fracture, ESG-H with a heat soak test is recommended


WARRANTY:

- The warranty requires installation by a trained glass specialist
- Care according to the care instructions
- 5-year warranty

ACCESSORIES:

- Sealing profiles: mandatory for glass shower rooms according to DIN EN 14428
- Door handles and knobs
- Distance adapter, towel bars & stabilization bars

TECHNICAL DETAILED DRAWINGS, GLASS SPECS:

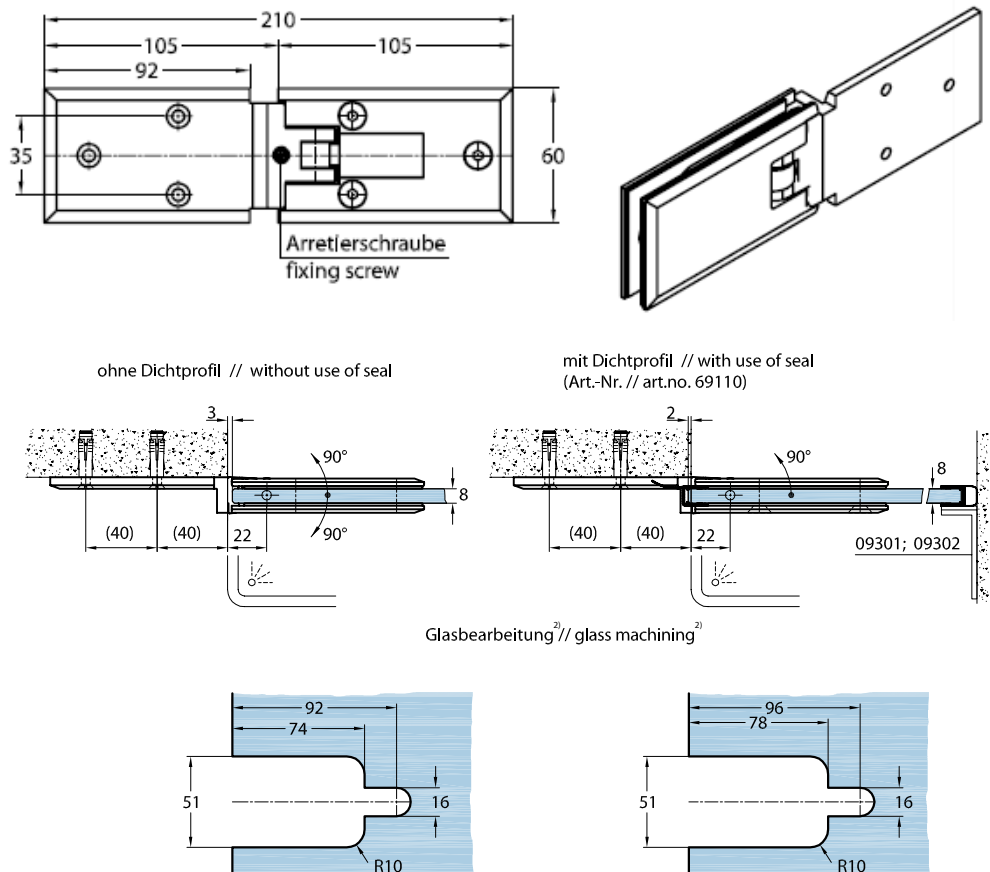


INSTRUCTIONS

ARTICLE NUMBER

06184

DESCRIPTION

glass door fitting, glass-glass 180°

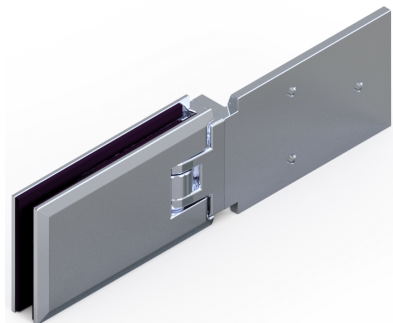

REQUIREMENTS:

- The assembly may only be carried out by a qualified installer.
In this regard, we expressly refer to our terms and conditions, in particular § 17.
- The glass used must be tempered safety glass 8 mm, manufactured in accordance with EN 12150 in Europe or matching glass construction codes elsewhere.
- When installing all-glass shower cubicles, EN 14428 must be taken into account in Europe or matching glass construction codes overseas.
- Tools required for hinge/glass mounting: 1 Allen key SW4.
- Tools required for hinge/wall mounting / wall: drill, spirit level, measuring tape, suitable screwdriver.
- Required fastening material for hinge/wall attachment: Depending on the situation, suitable screws for wall mounting or mounting to the load-bearing structure, as well as appropriate dowels or anchor fastenings as required.
The statically necessary type of fastening material must be checked individually on site. The countersinks for the screws are made for flat head screws 5 x yy mm screw heads, head diameter 9 mm. E.g. our article number 06790, 5 x 60 mm

ASSEMBLY OF THE MILANO GLASS DOOR FITTINGS

- Clean glass in the area of the fittings. Insert threaded studs of the fittings into the bore holes. It is essential to insert the supplied plastic hose sections as protection between the glass and the fitting stud and screw.
- Mount the hinge to the glass. Tighten the counter plates with the fastening screws [2] (Allen key SW 4) with 8 Nm.
- Support the glass properly, secure it against edge damage and align it.
- Drill holes /insert dowels or anchors if needed for the upper and lower wall mounting.
- Attach the glass to the wall so that the pins of the pair of fittings are exactly aligned.
- In case the wall is not in level consider using spacers – please contact us.
- Adjustment of the index position: the fittings are continuously adjustable. Its fixed using one locking screw [1] (Allen key SW 4), which are located under the soft PVC stoppers. Loosen the locking screw [1], then move the door leave to the desired index position and then first tighten the locking screw [1] with 8 Nm on the upper and then on the lower fitting and tighten again with 9 Nm.
- About 15 minutes after the installation, check all fastening screws [2] for tight fit and retighten with 9 Nm.

PRODUCT PORTFOLIO, ADVICE, TRAINING

We are happy to offer advice on alternative applications and systems, other glass thicknesses and types of glass such as laminated safety glass, higher weight loads, special fastenings, project planning, training, sales support etc.