

Glastürband Glas-Wand 180°

ARTIKELNUMMER

07198

Geeignet für ESG	8 mm
Max. Glasbreite	
Max. Glashöhe	
Max. Glasgewicht	



ANWENDUNG:

- Für Ganzglasduschen konzipiert, viele andere Anwendungen möglich
- Glas-Wand Befestigung

MATERIAL:

- Gehäuse Messing, galvanisch veredelt
- Einlagen: speziell für Rutschfestigkeit und Absicherung Glas/Metall

BESONDERHEITEN:

- Passende Glas-Wand, Glas-Glas Bänder und Glas-Glas Winkel erhältlich

EINSCHRÄNKUNGEN:

- Anzahl der einzusetzenden Winkel nach Rücksprache
- Notwendige Kombination mit Stabilisationsstangen, z.B. bei Walk In Duschen nach Rücksprache

GLASANWENDUNG:

- Vorgerichtet für 8 mm Einscheibensicherheitsglas (ESG), bei anderen Glasstärken ist eine Rücksprache erforderlich
- Die Beachtung der DIN EN 12150 ist vorgeschrieben, bei Duschkabinen erweitert um die DIN 14428
- Zur Vermeidung von Spontanbrüchen ist ESG-H mit Heat Soak Test empfohlen



GARANTIE:

- Voraussetzung ist die Montage durch eine(n) Fachmann/frau
- Pflege gemäß Pflegeanleitung
- 5 Jahre Garantie



ZUBEHÖR:

- Dichtprofile, Silikon: bei Glasduschen nach DIN EN 14428 vorgeschrieben
- Handtuchhalter

TECHNISCHE DETAILZEICHNUNGEN, GLASBEARBEITUNG:

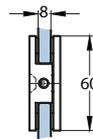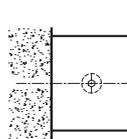

Glasbearbeitung

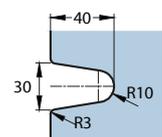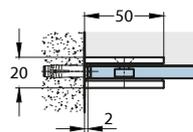

MONTAGEHINWEIS

ARTIKELNUMMER

07198

BESCHREIBUNG

Glastürbeschlag, Glas-Wand 180°



[1] Befestigungsschraube

VORRAUSSETZUNGEN

- Die Montage darf nur von einem(r) qualifizierten Fachmann/-frau durchgeführt werden. Wir weisen diesbezüglich ausdrücklich auf unsere AGBs hin, in Sonderheit auf den § 12.
- Das verwendete Glas muss Einscheibensicherheitsglas ESG 8 mm sein, gefertigt nach DIN EN 12150.
- Bei der Montage von Ganzglaskabinen muss die DIN EN 14428 berücksichtigt werden.
- Benötigtes Werkzeug für die Montage Beschlag/Glas: 1 Inbusschlüssel SW4.
- Benötigtes Werkzeug für die Montage Beschlag/Wand: Bohrmaschine, Wasserwaage, Maßband, passender Schraubenzieher.
- Benötigtes Befestigungsmaterial für die Montage Beschlag/Wand: Situationsbedingt geeignete Schrauben für die Wandmontage bzw. Montage an den tragenden Baukörper, sowie nach Bedarf entsprechende Dübel oder Ankerbefestigungen. Die statisch notwendige Art der Befestigungsmaterialien muss individuell bauseits geprüft werden. Die Senkungen für die Schrauben sind für Flachkopfschrauben 5 x yy mm Schraubenköpfe gefertigt, Kopfdurchmesser 9 mm. Z.B. unsere Artikelnummer 06790, 5 x 60 mm.

MONTAGE DER MILANO GLASTÜRBECHLÄGE

- Genaues Maß nehmen und Bohrung/Dübel für die obere und untere Wandbefestigung setzen.
- Halteklammer an der Wand befestigen, so dass die Beschläge genau im Lot sind.
- Gläser im Bereich der Beschlag-Verschraubungen reinigen.
- Glas fachgerecht abstützen, gegen Kantenstöße absichern und ausrichten.
- Beschlag-Gewindestutzen in den Glasausschnitt einführen. In den Ausschnitt unbedingt den mitgelieferten Kunststoffschlauchabschnitt, als Schutz zwischen Glas und Beschlag (Schraube), einsetzen.
- Klemmplatte mit den Befestigungsschrauben [1] (Inbus SW 4) mit 8 Nm fest verschrauben
- Ca. 15 Minuten nach erfolgter Montage alle Befestigungsschrauben [1] auf festen Sitz hin prüfen und nochmals mit 9 Nm nachziehen.

PRODUKTPORTFOLIO, BERATUNG, SCHULUNG

Wir bieten gerne Beratung für alternative Anwendungen und Systeme, andere Glasstärken und Glasarten wie z.B. VSG, höhere Gewichtsbelastungen, Sonderbefestigungen, Objektlösungen, Schulungen, Verkaufsberatung etc. an.

Glass door fitting glass-wall 180°

ARTICLE NO.

07198

Suitable for tempered safety glass	8 mm
Max. glass width	
Max. glass height	
Max. glass weight	



DESIGNED FOR:

- Frameless glass shower doors, many other applications possible
- Glass-wall mounting

MATERIAL:

- Housing made of brass, plated finish
- Inserts: special material for slip resistance - protection of glass/metal contact

SPECIAL FEATURES:

- Adjustable
- Slotted screw holes with cover plate
- Matching glass-wall and glass-glass hinges and glass-glass connectors available

RESTRICTIONS

- Number of connectors to be used depends on consultation
- Depending on the situation stabilization bars have to be used

GLASS APPLICATION:

- Prepared for 8 mm tempered safety glass, consultation is required for other glass thicknesses
- Compliance with DIN EN 12150 is mandatory, with shower stalls extended by DIN 14428
- To avoid spontaneous glass fracture, ESG-H with a heat soak test is recommended




WARRANTY:

- The warranty requires installation by a trained glass specialist
- Care according to the care instructions
- 5-year warranty



ACCESSORIES:

- Sealing profiles, silicone: mandatory for glass shower rooms according to DIN EN 14428
- Towel bars

TECHNICAL DETAILED DRAWINGS, GLASS SPECS:

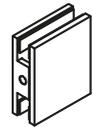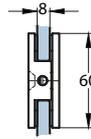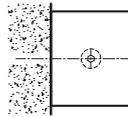

glass cut-out

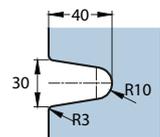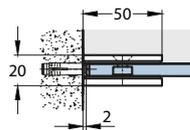


INSTRUCTIONS

ARTICLE NUMBER

07198

DESCRIPTION

glass door fitting, glass-wall 180°

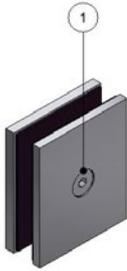

[1] fastening screws

REQUIREMENTS:

- The assembly may only be carried out by a qualified installer.
In this regard, we expressly refer to our terms and conditions, in particular § 17
- The glass used must be tempered safety glass 8 mm, manufactured in accordance with EN 12150 in Europe or matching glass construction codes overseas.
- When installing all-glass shower cubicles, EN 14428 must be taken into account in Europe or matching glass construction codes overseas.
- Tools required for hinge/glass mounting: 1 Allen key SW4.
- Tools required for hinge/wall mounting / wall: drill, spirit level, measuring tape, suitable screwdriver, silicone
- Required fastening material for hinge/wall attachment: Depending on the situation, suitable screws for wall mounting or mounting to the load-bearing structure, as well as appropriate dowels or anchor fastenings as required.
The statically necessary type of fastening material must be checked individually on site.
The countersinks for the screws are made for flat head screws 5 x yy mm screw heads, head diameter 9 mm. E.g. our article number 06790, 5 x 60 mm.

ASSEMBLY OF THE MILANO GLASS DOOR FITTINGS

- Take exact measure, then drill holes / insert dowels or anchors if needed for the upper and lower wall mounting.
- Attach connector to the wall so that the fittings are aligned exactly and securely fixed.
- Clean glass in the area of the connectors.
- Support the glass properly, secure it against edge damage and align it.
- It is essential to insert the supplied plastic hose sections into the glass bore holes as protection between the glass and the fitting-stud and screw.
- Tighten the counter plate with the fastening screws [1] (Allen key SW 4) with 8 Nm.
- About 15 Minutes after installation, check all fastening screws [1] for tight fit and tighten again with 9 Nm.

PRODUCT PORTFOLIO, ADVICE, TRAINING

We are happy to offer advice on alternative applications and systems, other glass thicknesses and types of glass such as laminated safety glass, higher weight loads, special fastenings, project planning, training, sales support etc.