

MONTAGEHINWEIS


ARTIKELNUMMER

82430

BESCHREIBUNG

Glastürband Glas-Glas 180°, rechts,
nach innen und außen öffnend

- [1] Arretierschraube
- [2] Befestigungsschrauben
- [3] Abdeckung
- [4] Abdeckung
- [5] Dichtprofil

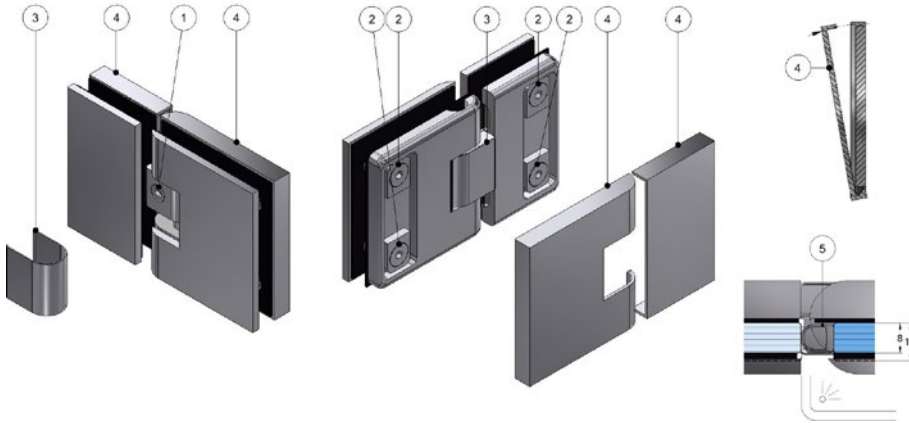

VORRAUSSETZUNGEN

- Die Montage darf nur von einem(r) Fachmann/frau durchgeführt werden.
Wir weisen diesbezüglich ausdrücklich auf unsere AGBs hin, in Sonderheit auf den § 12.
- Das verwendete Glas muss Einscheibensicherheitsglas ESG 8 mm (10 mm auf Anfrage) sein, gefertigt nach DIN EN 12150.
- Bei der Montage von Ganzglas-Duschtüren/-kabinen muss die DIN EN 14428 berücksichtigt werden.
- Benötigtes Werkzeug für die Montage Beschlag/Glas: 1 Inbusschlüssel SW4.

MONTAGE DER NEXT HS GLASTÜRBESCHLÄGE

- Gläser im Bereich der Beschlag-Verschraubungen reinigen.
- Schritt 1: Seitenteil fachgerecht abstützen, gegen Kantenstöße absichern, ausrichten und montieren.
- Schritt 2: Beschlag-Gewindestutzen in die Bohrungen am Türflügleinführen.
In die Glasbohrungen unbedingt die mitgelieferten Kunststoffschlauchabschnitte, als Schutz zwischen Glas und Beschlag (Schraube), einsetzen und Klemmplatten mit den Befestigungsschrauben [2] (Inbus SW 4) mit 8 Nm fest verschrauben.
- Schritt 3: Türflügel am Seitenteil befestigen. Auch hier unbedingt die mitgelieferten Kunststoffschlauchabschnitte, als Schutz zwischen Glas und Beschlag (Schraube), einsetzen und Klemmplatten mit den Befestigungsschrauben [2] (Inbus SW 4) mit 8 Nm fest verschrauben.
- Einstellung der Schließposition: die Beschläge sind in der Nulllage stufenlos einstellbar. Die Fixierung dieser Rasterung erfolgt mittels einer Arretierschrauben [2] (Inbus SW 4). Die Arretier-Schraube [1] lösen, dann den Türflügel in die gewünschte Nullstellung bewegen und anschließend zuerst am oberen, danach am unteren Beschlag, die Arretier-Schraube [1] mit 5 Nm fest anziehen und noch einmal mit 6 Nm nachziehen. Dann Abdeckung [3] montieren.
- Ca. 15 Minuten nach erfolgter Montage alle Befestigungsschrauben [2] auf festen Sitz hin prüfen und nochmals mit 9 Nm nachziehen. Abschließend Abdeckungen [4] montieren.

PRODUKTPORTFOLIO, BERATUNG, SCHULUNG

Wir bieten gerne Beratung für alternative Anwendungen und Systeme, andere Glasstärken und Glasarten wie z.B. VSG, höhere Gewichtsbelastungen, Sonderbefestigungen, Objektlösungen, Schulungen, Verkaufsberatung etc. an.

82430





- Weight approval up to 40 kg /glass door leaf
- Door size approved up to a width of 1000 mm or a height of 2250 mm

- Prepared for 8 and 10 mm tempered safety glass
- Compliance with DIN EN 12150 is mandatory, with shower stalls extended by DIN 14428
- To avoid spontaneous fractures, ESG-H with a heat soak test is recommended

- The warranty requires installation by a trained glass specialist
- Care according to the care instructions
- 5 year warranty

- Sealing profiles: mandatory for glass shower rooms according to DIN EN 14428
- Door handles, towel bars & stabilization bars

lift and drop direction
90° 15 mm
90°
door panel
fixed panel

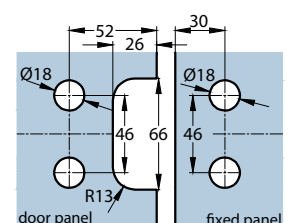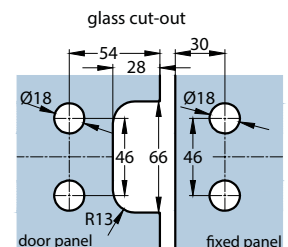

INSTRUCTIONS


ARTICLE NUMBER

82430

DESCRIPTION

Glass door fitting glass-glass 180°, right, opens in- and outwards

- [1] locking screw
- [2] fastening screws
- [3] cover
- [4] cover
- [5] seal

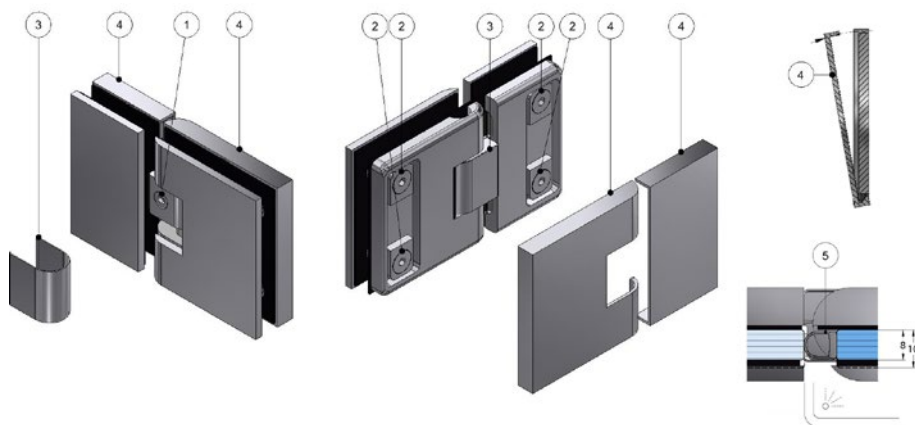

REQUIREMENTS:

- The assembly may only be carried out by a qualified installer.
In this regard, we expressly refer to our terms and conditions, in particular § 17
- The glass used must be tempered safety glass 8 mm (10 mm on request), manufactured in accordance with EN 12150 in Europe or matching glass construction codes elsewhere.
- When installing all-glass shower cubicles, EN 14428 must be taken into account in Europe or matching glass construction codes overseas.
- Tools required for hinge/glass mounting: 1 Allen key SW4.

ASSEMBLY OF THE NEXT HS GLASS DOOR FITTINGS

- Clean the glass in the area of the fittings
- Step 1: support the side panel properly, secure it against edge damage align and install it.
- Step 2: and insert the threaded studs of the fittings into the bore holes.
It is essential to insert the supplied plastic hose sections into the glass bore holes as protection between the glass and the fitting stud and screw.
- Step 3: Attach the door panel to the side panel. It is essential to insert the supplied plastic tube sections into the glass bore holes as protection between the glass and the fitting-stud and screw here as well. Tighten the counter plates with the fastening screws [2] (Allen key SW 4) with 8 Nm pressure. Tighten the counter plates with the fastening screws [1] (Allen key 4) with 8 Nm.
- Adjustment of the index position: the fittings are continuously adjustable. Its fixed using one locking screw [1] (Allen key SW 4. Loosen the locking screw [1], then move the door leave to the desired index position and then first tighten the locking screws [2] with 5 Nm on the upper and then on the lower fitting. Tighten again with 6 Nm. Then attach cover [3].
- About 15 Minutes after installation, check all fastening screws [2] for tight fit and tighten again with 9 Nm.
Finally attach covers [4].

PRODUCT PORTFOLIO, ADVICE, TRAINING

We are happy to offer advice on alternative applications and systems, other glass thicknesses and types of glass such as laminated safety glass, higher weight loads, special fastenings, project planning, training, sales support etc.